## Contents

CHAPTER 1		CHAPTER 4	
THE BASICS	3	THE DRIVETRAIN	69
What Every Driver Should Know	4	How the Drivetrain Works	70
Types of Cars	6	Common Drivetrain Problems	72
A Look Under the Hood	8	How to: Check and Fill an	
Identifying Your Car's Fluids	12	Automatic Transmission	74
Finding a Good Mechanic	16	How to: Check and Fill a	
Routine Maintenance Checks	18	Manual Transmission	76
Ten Tips for Maintaining Your Car	20	How to: Check and Maintain	
		CV Joints and U-Joints	78
CHAPTER 2		OLIA DIED. E	
BE PREPARED	23	CHAPTER 5 THE FUEL SYSTEM	83
What to Carry in Your Car	24		
Roadside and Emergency Safety	28	How the Fuel System Works	
Avoiding Lockout	30	Common Fuel System Problems	
How to: Safely Raise a Car	32	How to: Change the Fuel Filter	92
How to: Change a Tire	34	How to: Inspect and Replace the Air Filter	0.4
How to: Jump-Start a Battery	38		70
How to: Check and Change a Fuse	42	How to: Inspect and Replace the PCV Valve	9.0
		tile i Ov valve	70
CHAPTER 3		CHAPTER 6	
THE ENGINE	45	THE IGNITION SYSTEM	101
How the Engine Works	46	How the Ignition System Works	102
Common Engine Problems	50	Common Ignition System Problems	104
How to: Check and Add Engine Oil	52	Spark Plug Location	
How to: Change the Engine Oil	58	How to: Change the Spark Plugs	
How to: Inspect and Change		How to: Change Spark Plug Wires	
Accessory Belts	64	How to: Test for Spark	
		F	

CHAPTER 7	CHAPTER 11
THE COOLING SYSTEM 121	THE ELECTRICAL SYSTEM 177
How the Cooling System Works122	How the Electrical System Works178
Common Cooling System Problems125	Common Electrical System Problems 180
Locating Leaks	Troubleshooting the Starting System182
How to: Check and Add Coolant130	How to: Replace a Taillight Bulb
How to: Flush and Fill the	How to: Replace a Headlight Bulb186
Cooling System132	How to: Check the Charging System188
How to: Replace a Hose136	How to: Clean the Battery Terminals190
	How to: Change a Battery192
CHAPTER 8 THE AIR CONDITIONING SYSTEM 141	
	CHAPTER 12
How the A/C System Works	THE BRAKING SYSTEM 195
Common A/C System Problems 144	How the Braking System Works196
How to: Check for Leaks	Common Braking System Problems200
How to: Add Refrigerant148	How to: Inspect the Brakes 202
How to: Clean a Smelly A/C System152	How to: Change Brake Pads and Rotors 206
	How to: Check and Fill Brake Fluid 212
CHAPTER 9 THE EXHAUST SYSTEM 155	How to: Bleed the Brake System214
How the Exhaust System Works156	CHAPTER 13
Common Exhaust System Problems158	STEERING AND SUSPENSION 221
How to: Replace an Exhaust Gasket 160	How the Steering and
How to: Change an Oxygen Sensor164	Suspension Systems Work222
	Common Steering and
CHAPTER 10	Suspension Problems 226
THE COMPUTER SYSTEM 167	How to: Check and Fill
What the Computer System Does 168	Power Steering Fluid
Common Computer System Problems 170	How to: Lubricate the
How to: Check for Codes172	Suspension System
	How to: Inspect Shocks and Struts 234

## CHAPTER 14

TIRES AND WHEELS	237
Wheels 101	238
Tires 101	240
Choosing the Right Tires	244
Common Tire Problems	246
How to: Check the Tire Pressure	248
How to: Add Air to a Tire	249
How to: Rotate Your Tires	250
CHAPTER 15 THE EXTERIOR	255
Common Exterior Problems	256
Washing and Waxing Your Vehicle	258
How to: Wash a Car	259
How to: Wax a Car	261
Paint Imperfections and Rust Problems	262
How to: Remove Scuffs in Paint	264
How to: Restore Headlight Lenses	266
How to: Inspect and Replace Wiper Blades	268
How to: Inspect and Repair Weather Stripping	270
APPENDIXES	
Maintenance Schedules	272
Terms to Know	274
INDEX	276